

# k/apster

## Installation manual Handrail Comfort



Before starting the installation, make sure that the safety instructions for the intended use of the comfort staircase (please see the installation manual for the comfort version), must also be observed for the installation of the handrail modules.




**1.1** Place the handrail modules on the outer stair stringer of the folding staircase so that they are each in the middle of a stair stringer element. It is recommended to start at the staircase exit to create an even distance between the handrail modules.



**1.1** Use the pre-drilled holes in the handrail module to transfer the holes to the outer stringers of the staircase. A screw clamp can be used to prevent the modules from slipping during drilling. Use a 9mm wood drill bit to drill as straight as possible from both sides halfway through the stringboard to ensure a perfect fit.

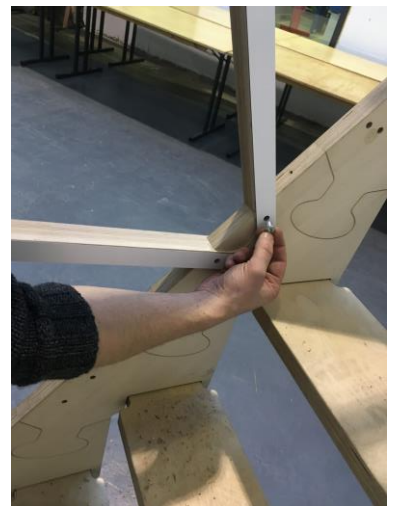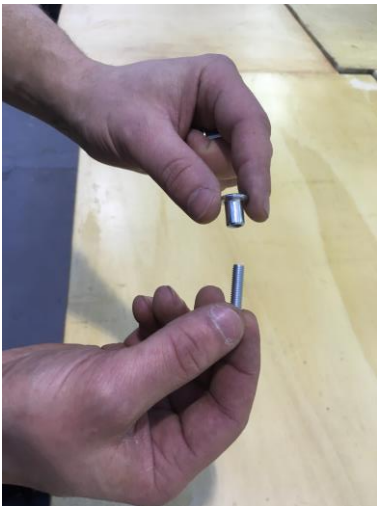

**1.2** Assemble a screw head with a grub screw. These can now be pressed through the holes. On the opposite side, the module should now be secured by another screw head.

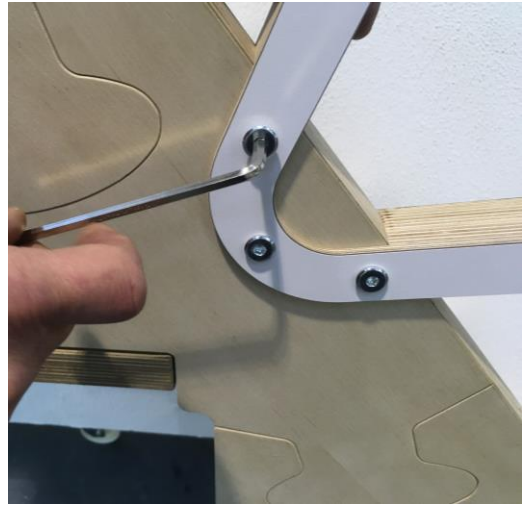

**1.3** Now tighten the screw on both sides using a 5 mm allen key.  
Repeat the insertion of the screw, the fastening of the the screw heads and the even tightening for all drillings of the module.

Repeat the described steps for all modules until the installation is completed. Make sure that there is an even distance between the handrail modules.



**Wood is a natural product: deviations in colour and structure are natural**



**raumvonwert GmbH**  
Gwinnerstraße 46  
60388 Frankfurt am Main  
Tel: 069 153201180  
info@klapster.de